

Spin Art Instructions

Please read before setting up or operating machine.

1. Open top door and place 1 inch piece of double stick adhesive tape on center of bracket. A small piece of duck tape rolled back onto itself works best. Place a card on bracket making sure all four sides are lined up in place. Same adhesive may be used for several cards
2. Never open top door more than 90 degrees as this will apply undo stress on the hinge.
3. Close top door. Door must remain closed while card is spinning to ensure safety.
4. Flip the switch to the "ON" position. The switch is located on the backside of machine.
5. Instruct the painter to point the tip of the paint bottle thru the top door screen and gently squeeze the paint bottle until the desired amount has been dispensed. Remember to advise the painter to place the bottle tip through the screen, as screens can be hard to clean when paint builds up on them.
6. When the card is ready to be stopped, flip the switch to the "OFF" position.
7. Open the door after the card has come to a complete stop. Never open door while card is spinning.
8. To remove card, grasp one side of the card and lift upward. Slip the card into a frame. The card can be carried away while it is still wet if it is in the frame.

Care of Machine and Supplies

- Wipe paint bottle tips frequently. Use a large paper clip to unclog tips should they dry up.
- Keep a damp rag handy to wipe tabletop should any paint end up there. Use a water-based paint.
- Be careful not to crush electrical cords when lowering and raising legs.
- Never lay machine on its backside on the switches, this may damage the switches.
- Clean the machine of all paint after each use and before returning the machine.

DO NOT IMMERSE MACHINE IN WATER.